



FlexTherm

CNT Heating Pad User Manual

Thank you for choosing our products, which provide a soothing and in-depth far infrared
thermotherapy experience.

Please read this manual carefully before using the product and strictly adhere to the
requirements of the product manual. After reading, please keep it properly for future reference.

Catalogue

- **01**

- **Safety instructions**

- **02**

- **Product list**

- **03**

- **Product introduction**

- **04**

- **Directions for use**

- **05**

- **Washing instructions**

- **06**

- **Product parameters**

- **07**

- **Warranty terms**
-

01

Safety instructions

Before use, please carefully read all the [safety instructions]

Please adhere to the instructions provided in this instruction manual. In the event of any abnormal situation that may pose adverse effects or danger to your body, please cease using it immediately. The precautions outlined in this manual are crucial for your safety; you must comply with them.

Warning

1. This product is not suitable for infants or individuals who are unable to care for themselves or are insensitive to heat.
2. Children and the elderly must be fully guided and accompanied by their guardians. Pregnant women should consult their doctor before using this product.
3. This product is not suitable for medical use. The electric and magnetic fields may affect the operation of a cardiac pacemaker. Please consult your doctor before using this product.
4. The pad body must not come into contact with sharp objects to prevent puncturing the electric pad and avoid safety accidents.
5. When using, do not place any other heating products on the pad (such as a hot water bottle, controller, etc.).
6. When using the electric pad, avoid folding or wrinkling it, as it is prone to accumulating heat and may cause local overheating.
7. Use the heating pad on your body only; do not sit or lie on the product.
8. Do not use this product if the pad is wet or not completely dry.
9. Do not use this product while sleeping, and unplug the adapter when the product is not in use.
10. Do not place the product under the mattress or quilt while it is in use.
11. This product should not be bleached, ironed, or dry-cleaned.
12. Please use the power adapter supplied with this product; otherwise, it will not work normally.
13. Please do not disassemble, repair, or refit the product yourself. Should you require assistance, please contact us.

02


Product list

This package contains the following products and accessories.


❶ CNT Heating pad

❷ Power adapter


❸ User Manual

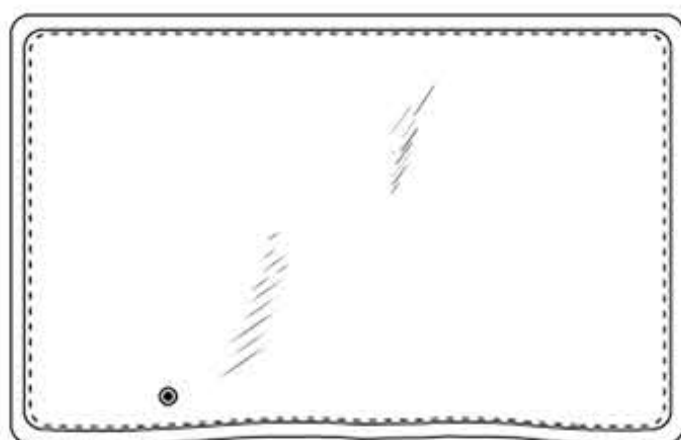

❶

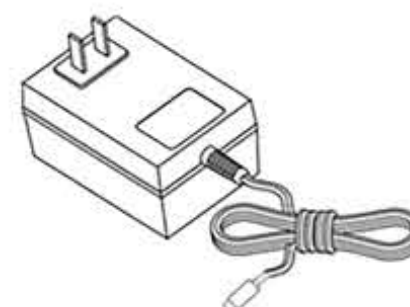

❷


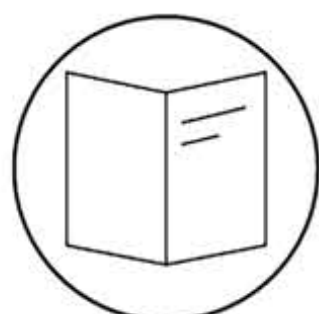


❸



03

Product introduction


CNT Heating Pad

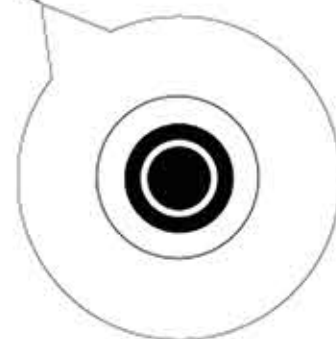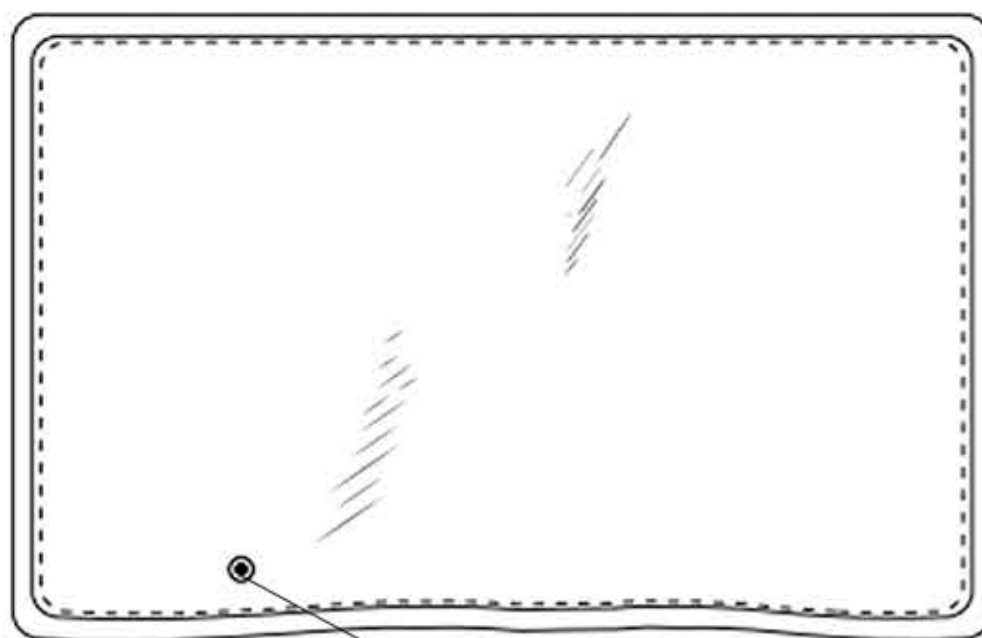

Controller

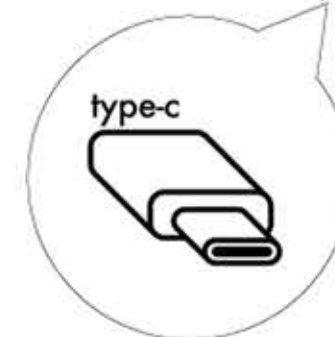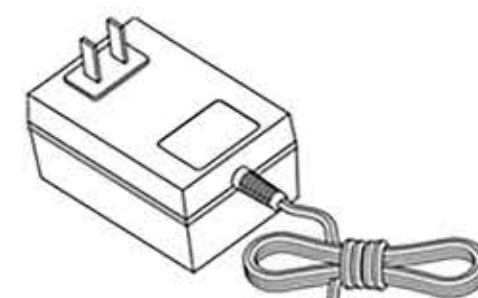

Polyester Fiber

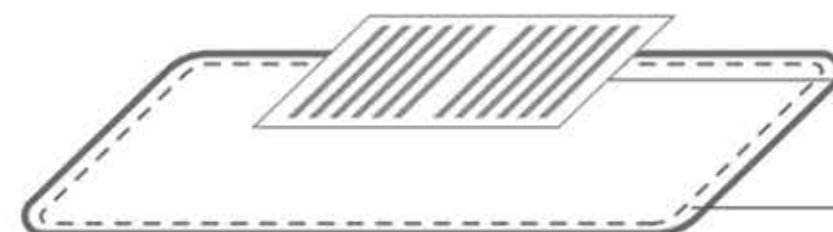




Carbon Nanotubes

Polyester Fiber

04

Directions for use

Power connection instructions

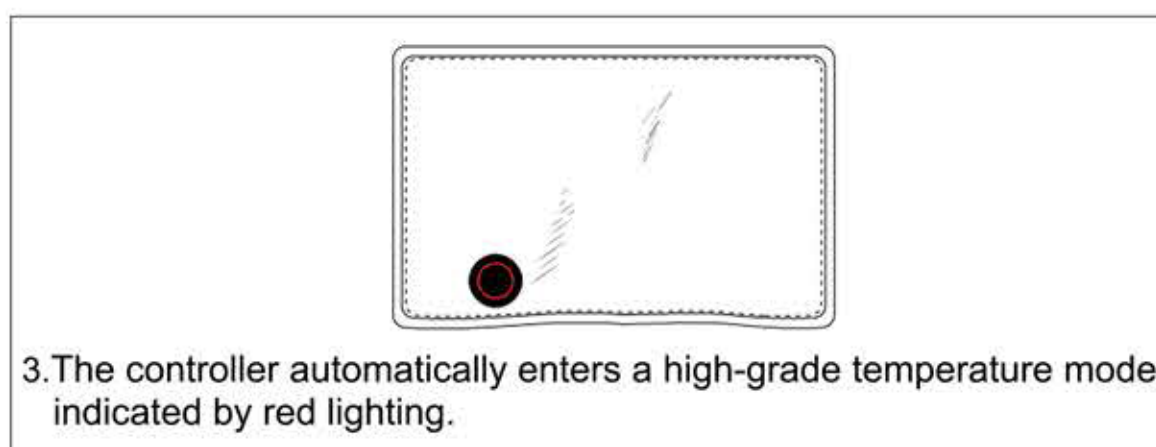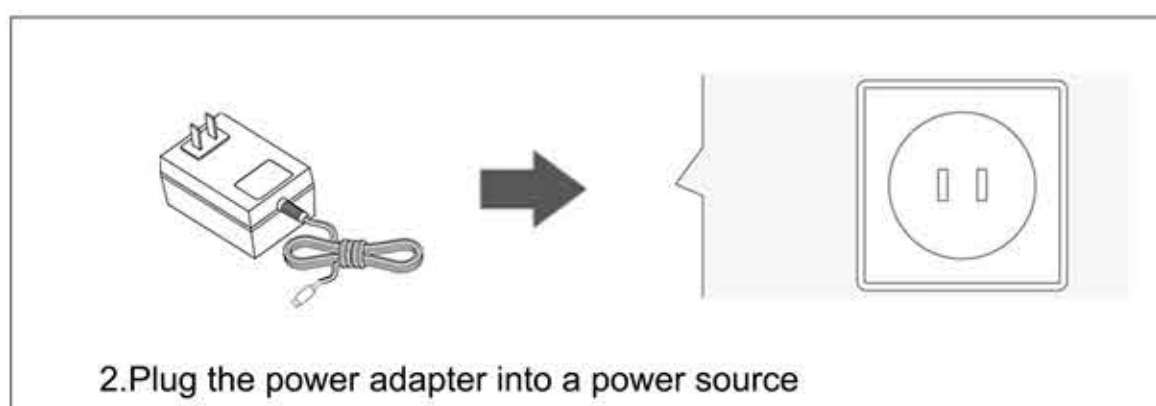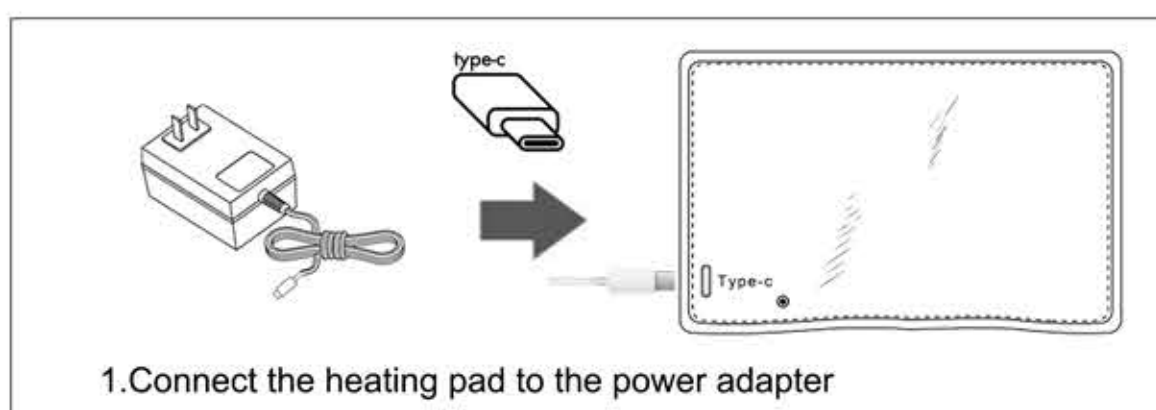

04

Directions for use

Turn on/Off



Turn on: Plug in to power on automatically, entering high-level heating mode with the controller indicator showing red.



Turn off: 1.Switch sequentially through high → medium → low levels to standby mode, and the controller indicator turns off.
2.Long press (1.2 seconds) in any heating level to directly enter standby mode, with the controller indicator turning off.

Use tips:

The heating pad fabric is embedded with fragrance-infused microcapsules pre-treated through a specialized process. These capsules gradually release soothing aromas when gently rubbed or activated by heat, creating a calming effect for enhanced relaxation.

Lightly massage the surface to intensify the fragrance release.

Third gear adjustment



Shortly press the button once

Red-127°F



Shortly press the button twice

Orange-113°F




Shortly press the button three times


White-104°F

After 3 hours of heating with no operation, the system will automatically enter standby mode, and the controller indicator will turn off.

05 Washing instructions

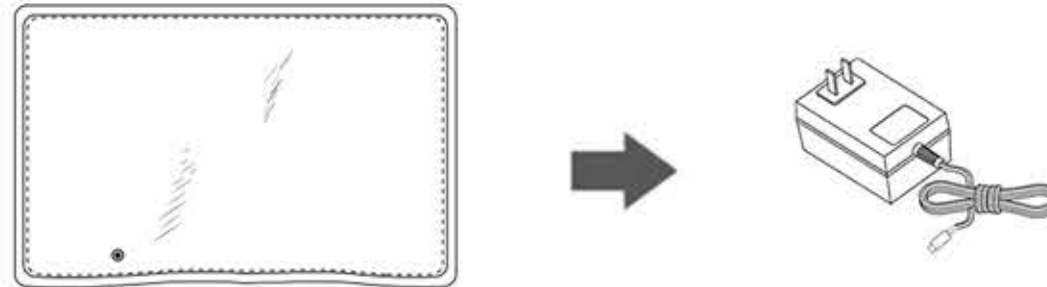


Disconnect the powder adapter

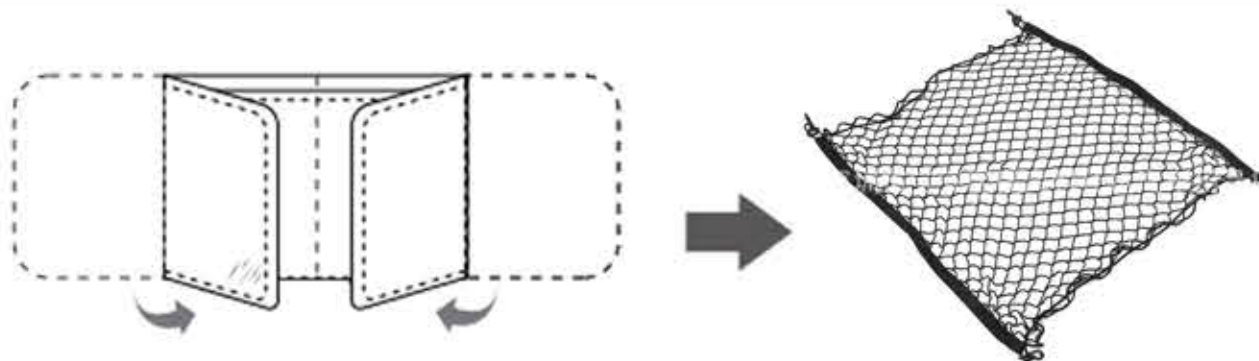

Put the heating pad into the laundry bag



Machine washable

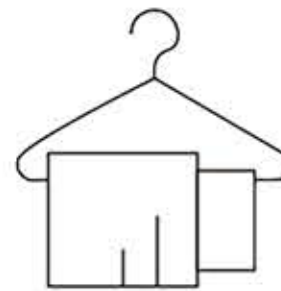

Hang dry

Be careful

- The electric pad body is machine washable and compatible with common household neutral detergents.
- Hot water soaking and dry cleaning are strictly prohibited.
- After drying thoroughly, it can be reused.

06**Product parameters**

Product parameters	
Product name	CNT Heating Pad
Product size	size:33x17.3 inch
Core heating material	Carbon nanotube materials
Heating area	23.62x14.17 inch
Temperature gears	104°F/113°F/127°F
Blanket fabric	Polyester fiber
Maximum output power	24W;12V/2A

● **The following issues can be fixed for free.**

1. Users can enjoy free maintenance service in the event of quality problems during normal use of the product.
 2. Warranty period: 1 year, implemented from the date of purchase.
-

● **In case of any of the following circumstances, it does not belong to the scope of free warranty.**

1. Product damage resulting from improper use.
2. Users disassemble, repair, and refit products without authorization.
3. Aging, wear, scratches, stains, etc., caused by normal use.
4. The warranty period has expired.
5. Failure to use, maintain, and keep the product according to the requirements of the instruction manual may result in product failure or damage.
6. Failures caused by force majeure (such as fire, earthquake, typhoon, flood, war, and other external factors).

Contact us

After-Sale Service email address : flextherm@boenning.cn

Thank you very much for purchasing this product.

If you encounter non-fault problems during the use of the product , we will provide on-line consultation services.