




USER MANUAL

COMPONENTS

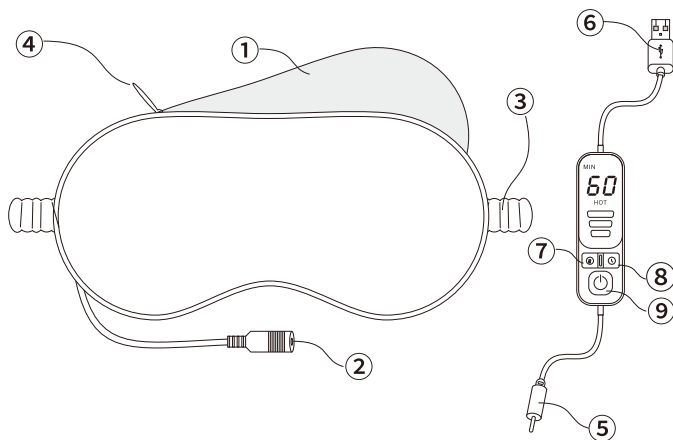

Eye mask




- ① Carbon nanotube heating sheet
- ② DC socket on eye mask
- ③ Adjustable strap
- ④ Zipper

Controller

- ⑤ DC plug on controller
- ⑥ USB connector
- ⑦ Heat setting button
- ⑧ Time setting button
- ⑨ Switch button


Accessory

- ⑩ Lavender aroma pad
- ⑪ Gel cool pad
- ⑫ Carrying pouch

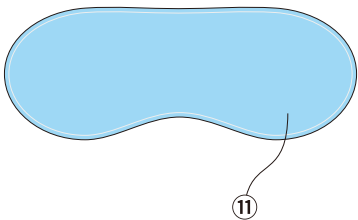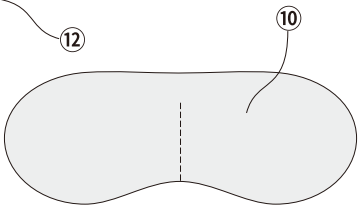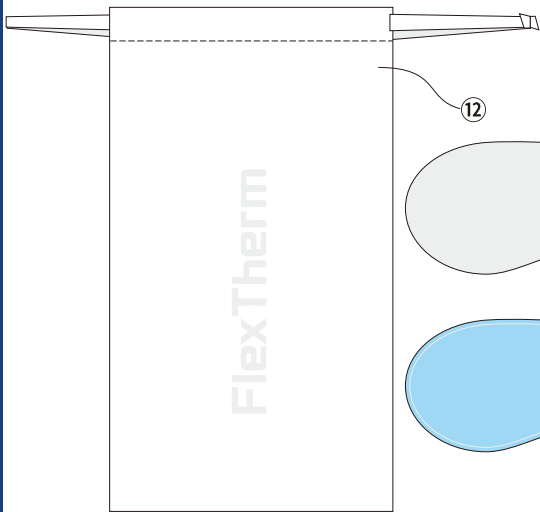


HOW TO USE


1. Insert the DC plug on controller into the DC socket on eye mask.

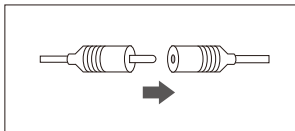


2. Insert the USB-B interface on the controller into the mobile charging adapter or the USB interface on the computer & power bank.

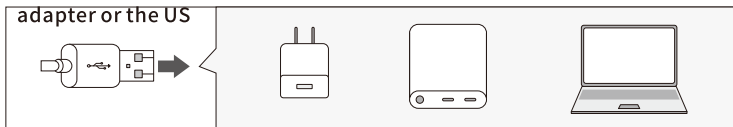


3. Plug the mobile charging adapter into a power socket.

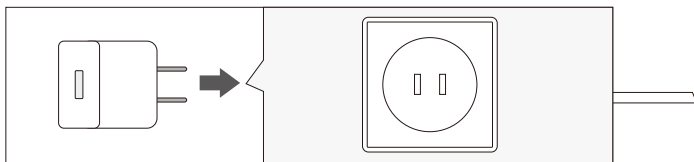


4. Press the ⑨ button to turn it on/off. Press the ⑦ button to select a temperature mode(High/Medium/Low). Press the ⑧ button to select the heating time. without any operation, the eye mask will shut off automatically when timing is over.

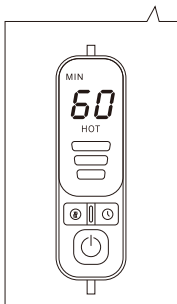

5. Put lavender aroma pad into the eye mask to enjoy aromatherapy.

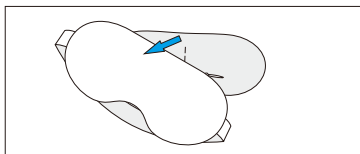


6. Put gel cool pad into the eye mask for cold compress.

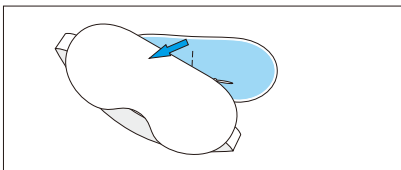

7. Adjustable strap allows you to fine-tune eye mask to fit your head comfortably.

8. If eyes feel dry while using, spray 2-3 drops of warm water on the fabric of eyes side of the eye mask to have a moist compress.

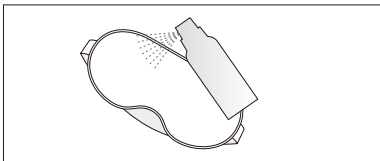

(Note: There is no battery inside the eye mask . Keep it power on when using it.)

SPECIFICATIONS

Input:	DC 5V1A-2A
Output:	DC 3-5V Max 1A
Dimension:	7.87*3.7 inches
Preset Timer:	15 mins/30 mins/45 mins/60 mins
Heating Temperature:	High(140°F)/Medium(131°F)/Low(122°F)

IMPORTANT SAFETY WARNINGS

1. Do not use while sleeping.
2. This eye mask is not to use on an invalid, sleeping or unconscious person, or a person with poor blood circulation.
3. Never pull this eye mask by the supply cord. Do not fold while heating. To avoid overheat, do not put it under the pillow and comforter. Burns will result from improper use.
4. Patients with unhealed skin wounds or abnormal skin of eyes are forbidden to use it.

WASH CARE

1. Pull out the carbon nanotube heating sheet before wash.
2. Hand washing is recommended.

3. Lavender aroma pad can't be washed.

4. Gel ice pad can be washed with clean water or wiped with a damp cloth, not machine washable.

Warm Tip: Stop heating when feeling too hot. Be care of moderate temperature burn.

AFTER-SALES SERVICE

1. If there is any quality problem, please contact us by email. The email address: zhoujun@boenning.cn, we will solve it for you as soon as possible.

2. If the goods cannot be used due to quality problems, we will provide you with service according to the one-year free maintenance principle.